

# How to check & change your car air filter?

414 Administrator Mon, Mar 29, 2010 [Automobiles](#) 0 3826

Your car's air filter is very important since it maintains some parts of your car system clean and free of dirt. If your air filter doesn't work properly and dirt enters your car this might make it go through different problems, and therefore it is important that you check the filter and change it when necessary. Your mechanic can do it for you although it is very easy and you could do it yourself as well.

It is recommended that you change your **car air filter** once a year or every 6,000 miles if you live in an averagely dusty area. But, if you can check it once in a while and replace it as soon as it needs it this would be much better. Checking your car's air filter is an easy thing to do and replace it is not complicated once you learn how to do it.

If you wish to check your **car air filter** yourself and in an easy way, you can do so by using a light from inside pointing outside and check how bright it looks through it. If you see the light clearly, then your air filter is still good, but if you can't see much of the light then it indicates the filter needs to be changed.

Newer cars have different **air filters** than older ones. If your car is rather new, its air filter is probably rectangular and you might find it located under the hood, near the radiator area or the fender wells. In order to change it, you must open it and take the actual air filter from it, replacing it by the new and then closing it again.

If your car is older, then the air filter will probably be of a big round shape and located near the engine area. It might probably be screwed, and all you might need to do is to unscrew the cover, let the air filter come out, and place the new one instead of it. You must pay attention in case it has any other attachment mechanisms such as clips which you would need to take off as well.

## How Do I Change My Car Air Filter?

Car air filter is a replaceable cleansing unit. In most cases a car air filter can be replaced in under 5 minutes. The air cleaner in your car should be changed every 6,000 miles or sooner depending on driving conditions. Changing your car air filter is easy. First locate the air filter housing; this is where the air filter element resides. To locate the air filter housing look for the engine air intake tube. Next, remove the air filter housing retainer clips or screws and remove the air filter housing top. Replace the old air filter with a new air filter and reassemble.

Note: Please be sure you clean out any leaves or debris inside the air filter housing upon reassembly.

### **How To Know When The Car Air Filter Needs Change?**

To determine if your air cleaner needs to be changed remove the air filter housing retainer clips or screws and remove the filter, gently tap the air filter, if you see dust falling from the air cleaner it is filled to capacity and replacement is needed. It is always recommended to use top quality air filters for your car. Imagine the amount of air processed through your engine in the course of driving 6,000 miles. If you choose an inferior style air filter you are allowing dirt particles to enter your engine which cause premature wear and could lead to catastrophic engine failure.

Online URL:

<https://www.articlediary.com/article/how-to-check-change-your-car-air-filter-414.html>